DMX 512 CONTROLLER SERIES

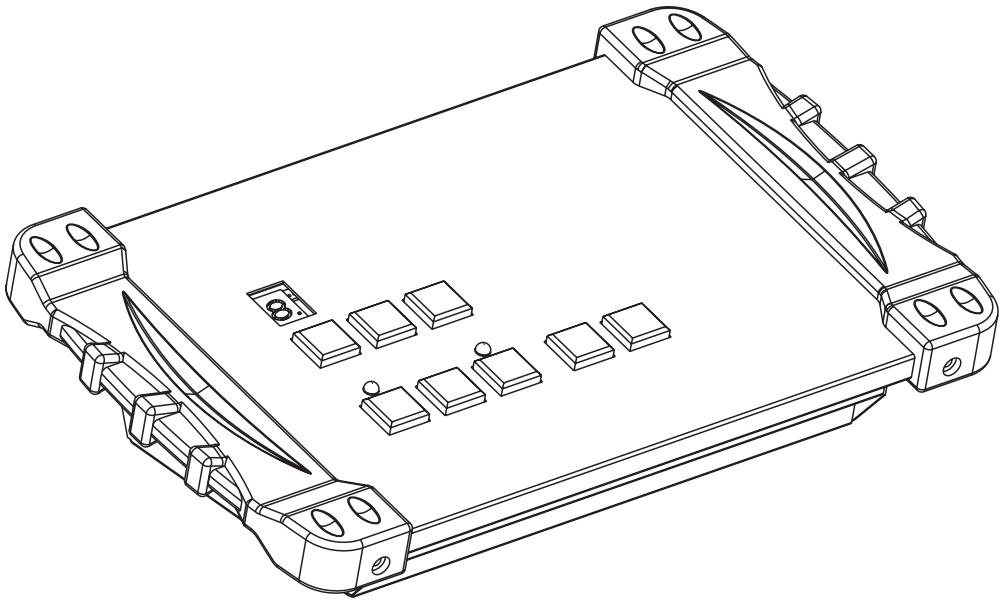

DMX Recorder User Manual

Version:1.0 28 Feb 2008

This product manual contains important information about the safe installation and use of this product. Please read and follow these instructions carefully and keep this manual in a safe place for future reference.

1,Product Introduction

This product is a small DMX recorder. Suitable applications include small disco, Club, Private party and other small places.

DMX recorder record project programmes in advance so that people can use it easily.

DMX recorder can not make program alone. All record programs should be made by other DMX512 consoles and then record to it.

2. Open packing and check

* DMX512 recorder 1PC
* AC Adaptor 1PC
* User Manual 1PC

3. Control Panel Instruction

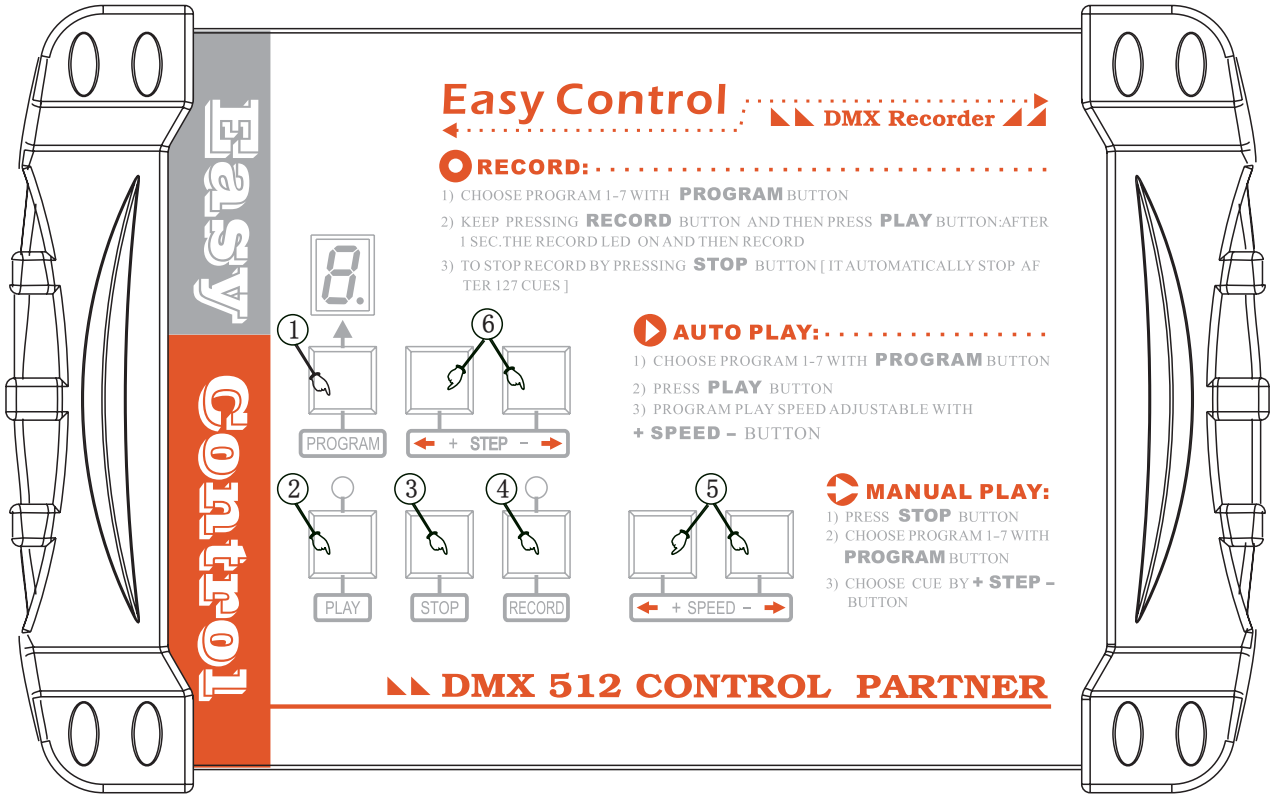
EASY CONTROL
Easy Control
DMX Recorder
RECORD:
1) CHOOSE PROGRAM 1-7 WITH PROGRAM BUTTON
2) KEEP PRESSING RECORD BUTTON AND THEN PRESS PLAY BUTTON:AFTER 1 SEC.THE RECORD LED ON AND THEN RECORD
3) TO STOP RECORD BY PRESSING STOP BUTTON [IT AUTOMATICALLY STOP AFTER 127 CUES]
AUTO PLAY:
1) CHOOSE PROGRAM 1-7 WITH PROGRAM BUTTON
2) PRESS PLAY BUTTON
3) PROGRAM PLAY SPEED ADJUSTABLE WITH + SPEED – BUTTON
MANUAL PLAY:
1) PRESS STOP BUTTON
2) CHOOSE PROGRAM 1-7 WITH PROGRAM BUTTON
3) CHOOSE CUE BY + STEP – BUTTON
PROGRAM
+ STEP –
PLAY
STOP
RECORD
+ SPEED –
DMX 512 CONTROL PARTNER

①	PROGRAM	Choose 1-7 programs
②	PLAY	Run program
③	STOP	Pause
④	RECORD	Download program from DMX512 console
⑤	+ SPEED -	Program play speed
⑥	+ STEP -	Choose step/scene of program

4.Record

4.1 Edit program with DMX512 console in advance

4.2 Use DMX512 signal cable to connect DMX OUT of DMX512 console and IN RECORD of DMX512 Recorder.

4.3 Switch on DMX512 console program auto-run function

4.4 Power on DMX512 Recorder

4.5 Press **PROGRAM** to set program number 1-7. (Program 1…7)

4.6 Keep pressing **RECORD** and press **PLAY** at the same time. LED light for RECORD will on about 1 second later mean DMX512 Recorder begin to record program.

4.7 Press **STOP** after all scenes of this program be recorded.

4.8 Repeat 4.5 - 4.7 to record 1….7 programs.

4.9 Power off DMX512 console and DMX512 Recorder.

4.10 Disconnect signal cable between DMX512 console and DMX512 Recorder.

5.AUTO PLAY

5.1 Connect OUT RECORD of DMX512 Recorder to DMX IN of 1st intelligent light with DMX512 signal cable.

5.2 Press **PROGRAM** to choose program 1…7

5.3 Press **PLAY** to run selected program

5.4 Press **+ SPEED -** to adjust program speed.

6. Manual

6.1 Connect OUT RECORD of DMX512 Recorder to DMX IN of 1st intelligent light with DMX512 signal cable.

6.2 If DMX512 Recorder under Auto-run mode, press **STOP**

6.3 Press **PROGRAM** to choose program 1…7

6.4 Press **+ STEP -** to run each scene.

7. Delete program

7.1 Not connect signal cable at **IN RECORD** of DMX512 Recorder

7.2 Press **PROGRAM** to select program to be deleted from 1…7

7.3 Keep pressing **RECORD** and press **PLAY** until LED light of RECORD on around 1sec later.

7.4 Press **STOP** and RECORD LED light flash mean delete program succeed.

8. Delete all programs

8.1 Power off DMX512 Recorder

8.2 Press **STOP** and **PROGRAM** at the same time and then switch on DMX512 Recorder.

Caution:

DMX512 Recorder can not change fade in/out time of scenes.

It is necessary to fine adjust suitable time to match with motor speed of each intelligent light while edit program on DMX512 console in advance.